

Epoxy Kelin Waterborne Epoxy Epoxy Resin Subbase Epoxy Epoxy Resin

Filler Epoxy Gap





□□□□□□□□□□□□□□□□□□□□□□□□□□□□



□□□□□□□□□□□□□□□□□□□□ □



Clean the tiles and keep it dry



Polish with tile wax except the glazed tile



Open & Watch, both sides can extruded meanwhile



Screw on the nozzle, put on the grout gun



Inclined cut the top of the nozzle in 45°



Squeeze out 60-80cm long grout in the forefront




Evenly squeeze out the tile agent along the gap



Press the grout with professional glue-press tools



Don't touch in 4-5 hours and remove excess grout then.

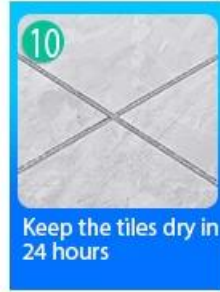

Keep the tiles dry in 24 hours

□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□



Cutter Knife



Pointing trowel



Brush



Rainbow Scraper



Stirring Knife




The sponge



Scouring Pad

□□□□□□□□□□ □□□□□□□□

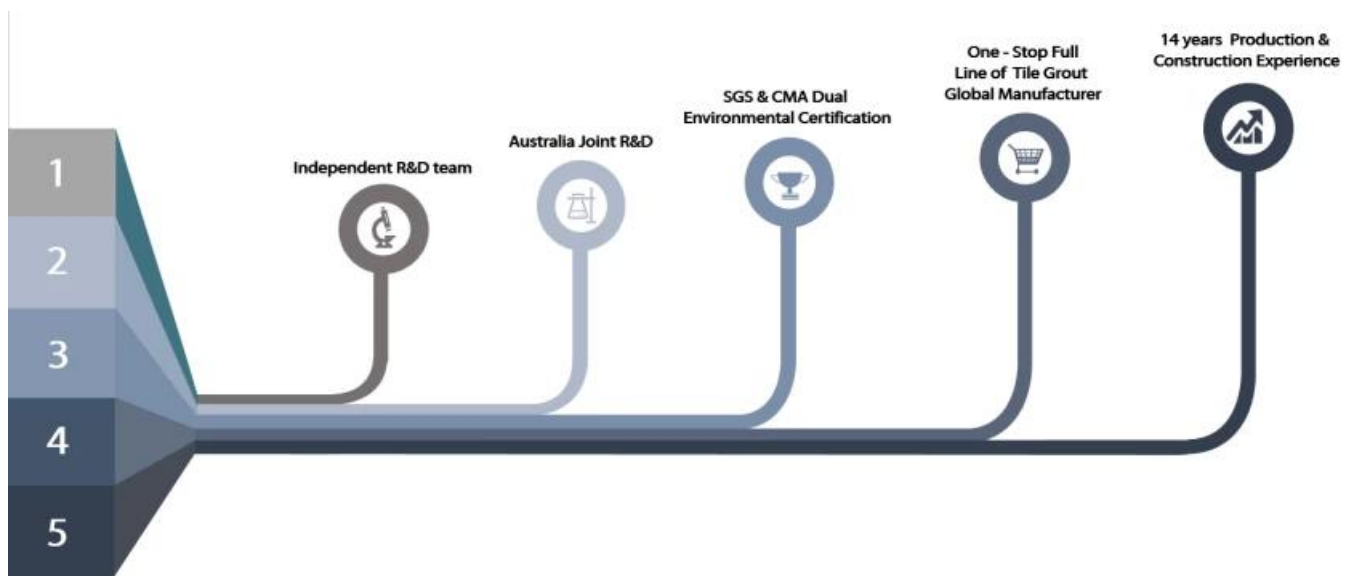

□□□□□□□□□□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□□□□□□□

