


Epoxy Kelin Waterborne Subbase Epoxy Epoxy

China Resin Epoxy Grout M RCAN



Application of epoxy grout in various areas including toilets, corners, bath edges, mosaic tiles, skirting lines, ceramic tiles, floor tiles, and kitchens.



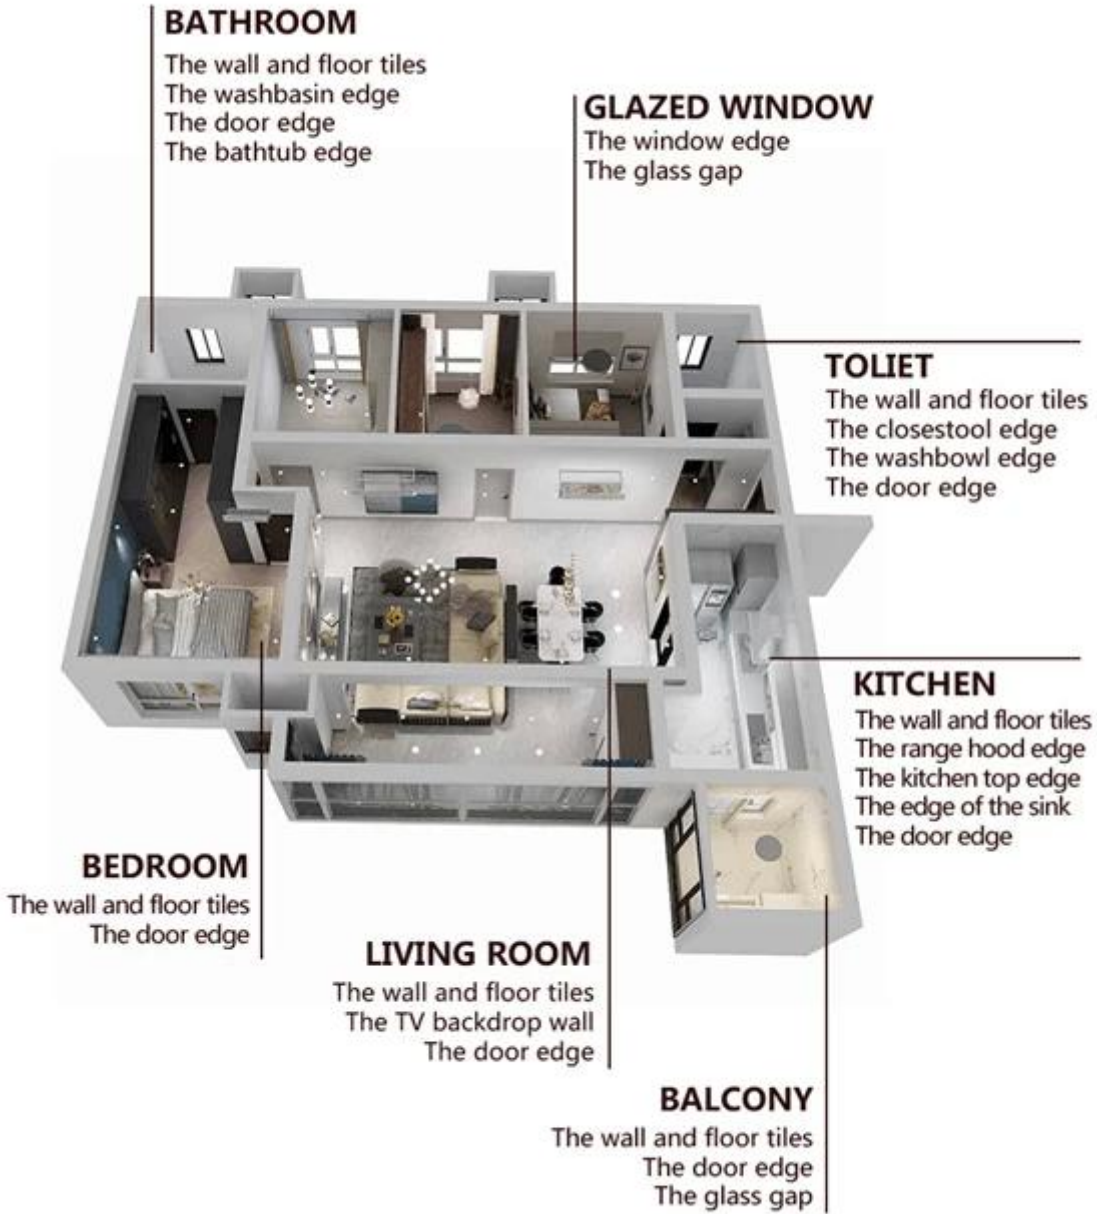

□□□□□□□□□□□□□□□□□□□□ □



01

Clean the tiles and keep it dry



02

Polish with tile wax except the glazed tile



03

Open & Watch, both sides can extruded meanwhile



04

Screw on the nozzle, put on the grout gun



05

Inclined cut the top of the nozzle in 45°



06

Squeeze out 60-80cm long grout in the forefront



07

Evenly squeeze out the tile agent along the gap



08

Press the grout with professional glue-press tools



09

Don't touch in 4-5 hours and remove excess grout then.



10

Keep the tiles dry in 24 hours

□□□□□□□□□□□□□□□□□□□□□□□□□□□□



01



02



03



04



05



06



07

Cutter Knife

Pointing trowel

Brush


Rainbow Scraper

Stirring Knife

The sponge

Scouring Pad

□□□□□□

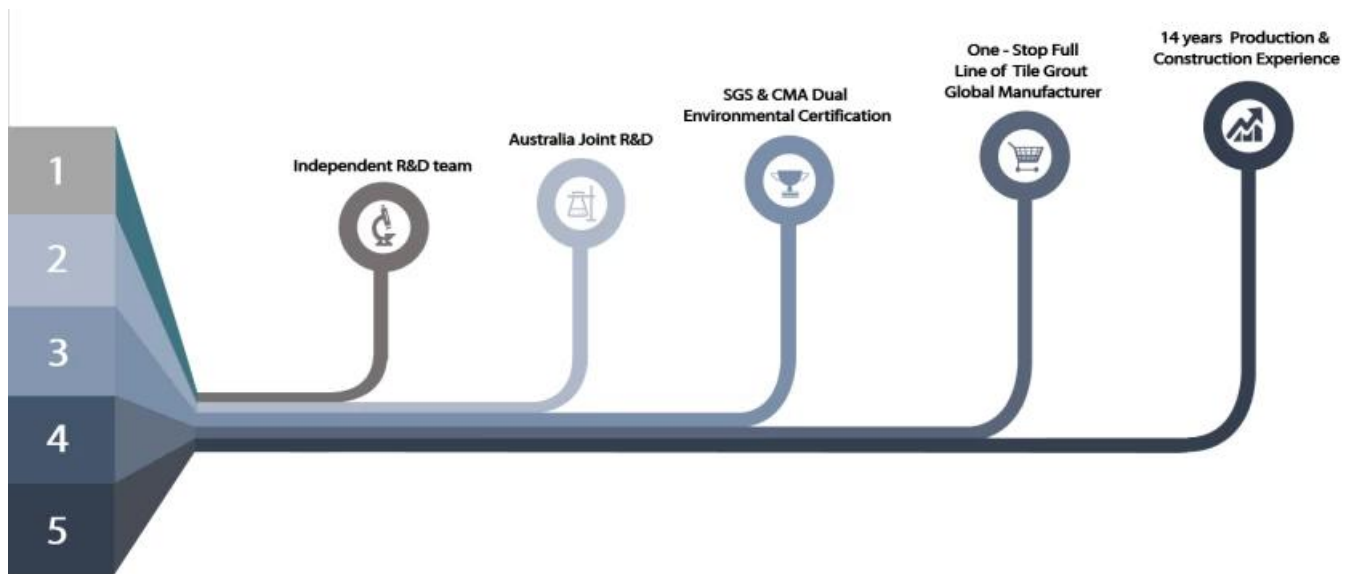

□□□□□□□□□□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□□□□□□□

