

Subbase Epoxy Resin

Epoxy Gap Filler Great Filler Tile Kelin







□□□□□□□□□□□□□□□□□□□□ □



01  
Clean the tiles and keep it dry



02  
Polish with tile wax except the glazed tile



03  
Open & Watch, both sides can extruded meanwhile



04  
Screw on the nozzle, put on the grout gun



05  
Inclined cut the top of the nozzle in 45°



06  
Squeeze out 60-80cm long grout in the forepart



07  
Evenly squeeze out the tile agent along the gap



08  
Press the grout with professional glue-press tools



09  
Don't touch in 4-5 hours and remove excess grout then.




10  
Keep the tiles dry in 24 hours

□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□



Two Component Caulking Gun

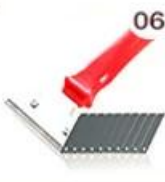

- |                    |                       |             |                     |                      |                    |                            |                    |
|--------------------|-----------------------|-------------|---------------------|----------------------|--------------------|----------------------------|--------------------|
| 02<br>Cutter Knife | 03<br>Pointing trowel | 04<br>Brush | 05<br>Forming Stick | 06<br>Perching Knife | 07<br>Masking Tape | 08<br>Stainless Steel Ball | 09<br>Cleaning Awl |
|--------------------|-----------------------|-------------|---------------------|----------------------|--------------------|----------------------------|--------------------|

□□□□□□



□□□□□□□□□□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□□□□□□□

