


Epoxy Kelin Waterborne Subbase Epoxy Epoxy Resin

Wide Application

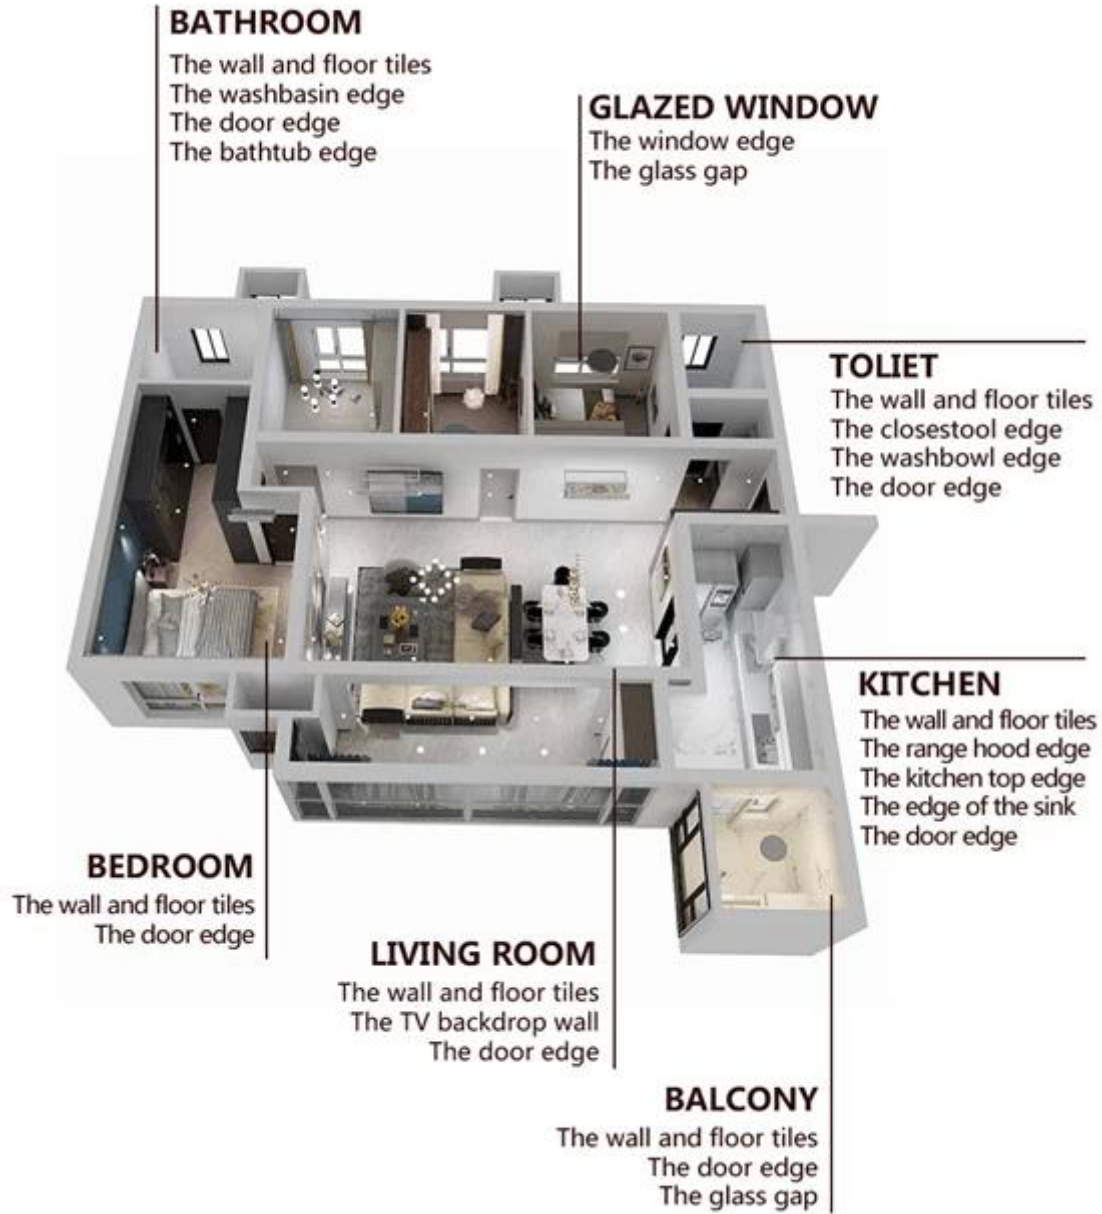

Wide Application




□□□□□□□□□□□□□□□□□□□□□□ □

- Clean the tiles and keep it dry
- Polish with tile wax except the glazed tile
- Open & Watch, both sides can extruded meanwhile
- Screw on the nozzle, put on the grout gun
- Inclined cut the top of the nozzle in 45°
- Squeeze out 60-80cm long grout in the forefront
- Evenly squeeze out the tile agent along the gap
- Press the grout with professional glue-press tools
- Don't touch in 4-5 hours and remove excess grout then.
- Keep the tiles dry in 24 hours

□□□□□□□□□□□□□□□□□□□□□□□□□□

01 Cutter Knife | 02 Pointing trowel | 03 Brush | 04 Rainbow Scraper | 05 Stirring Knife | 06 The sponge | 07 Scouring Pad

□□□□□□□□□□ □□□□□□

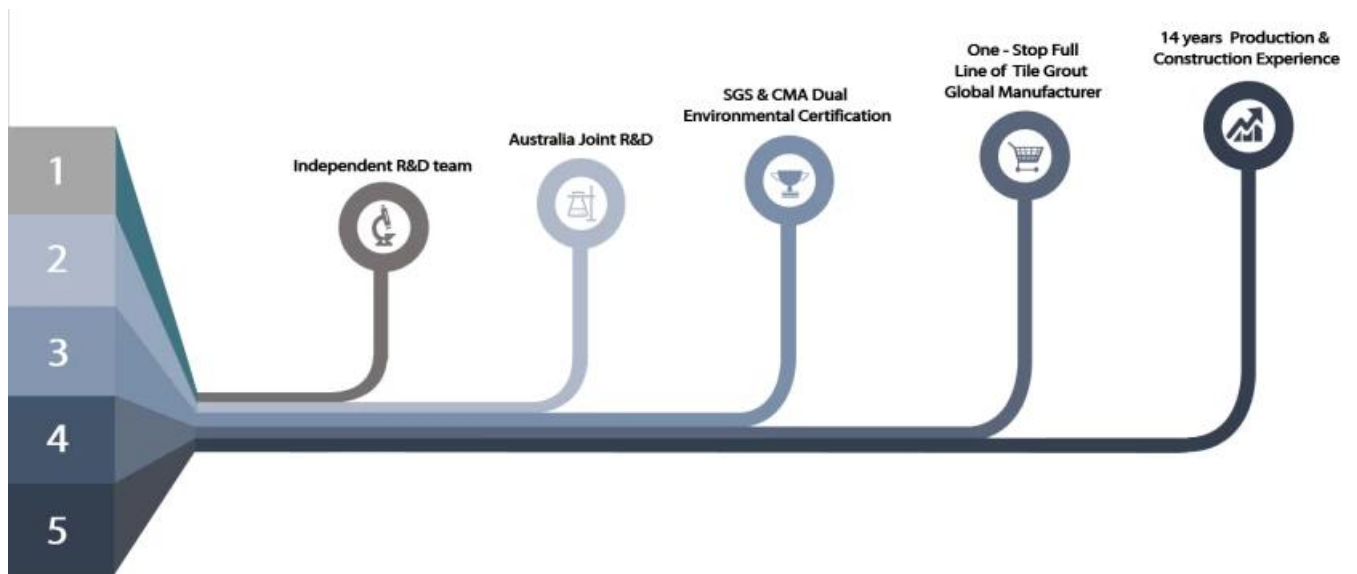

□□□□□□□□□□



Creaming Machine Line



Testing Machine



Batching Production Line



Cooling Filling



Filling Machine Line



Film-coated Machine



Real Material Stock



Stock

□□□□□□□□

