

Kelin polyurea POLYUREA  
 Chinese Academy of Sciences "



Chinese Academy of Sciences "



**BATHROOM**

The wall and floor tiles  
 The washbasin edge  
 The door edge  
 The bathtub edge

**GLAZED WINDOW**

The window edge  
 The glass gap

**TOILET**

The wall and floor tiles  
 The closetool edge  
 The washbowl edge  
 The door edge

**KITCHEN**

The wall and floor tiles  
 The range hood edge  
 The kitchen top edge  
 The edge of the sink  
 The door edge

**BEDROOM**

The wall and floor tiles  
 The door edge

**LIVING ROOM**

The wall and floor tiles  
 The TV backdrop wall  
 The door edge

**BALCONY**

The wall and floor tiles  
 The door edge  
 The glass gap






01 Clean the tiles and keep it dry



02 Polish with tile wax except the glazed tile



03 Open & Watch, both sides can extruded meanwhile

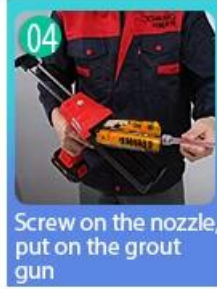

04 Screw on the nozzle, put on the grout gun




05 Inclined cut the top of the nozzle in 45°



06 Squeeze out 60-80cm long grout in the forepart



07 Evenly squeeze out the tile agent along the gap

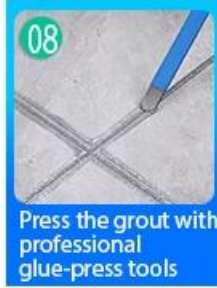

08 Press the grout with professional glue-press tools



09 Don't touch in 2-4 hours and remove excess grout then.




10 Keep the tiles dry in 24 hours

□□□□□□□□□□□□□□□□□□□□□□□□□□□□



Two Component Caulking Gun

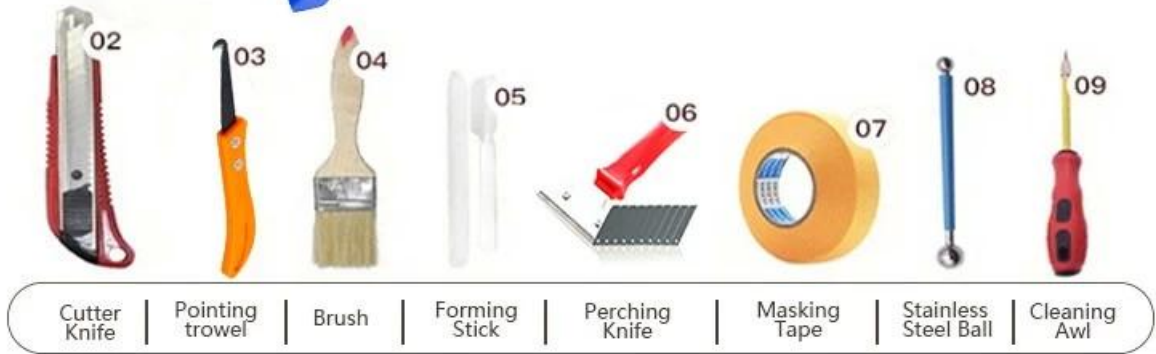

Cutter Knife | Pointing trowel | Brush | Forming Stick | Perching Knife | Masking Tape | Stainless Steel Ball | Cleaning Awl

□□□□□□□□□□□□□□ □□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□

□□□□□□□□

