


Epoxy Kelin Waterborne Epoxy Epoxy Resin Subbase Epoxy Epoxy Resin Kelin



Epoxy Kelin Waterborne Epoxy Epoxy Resin Subbase Epoxy Epoxy Resin Kelin



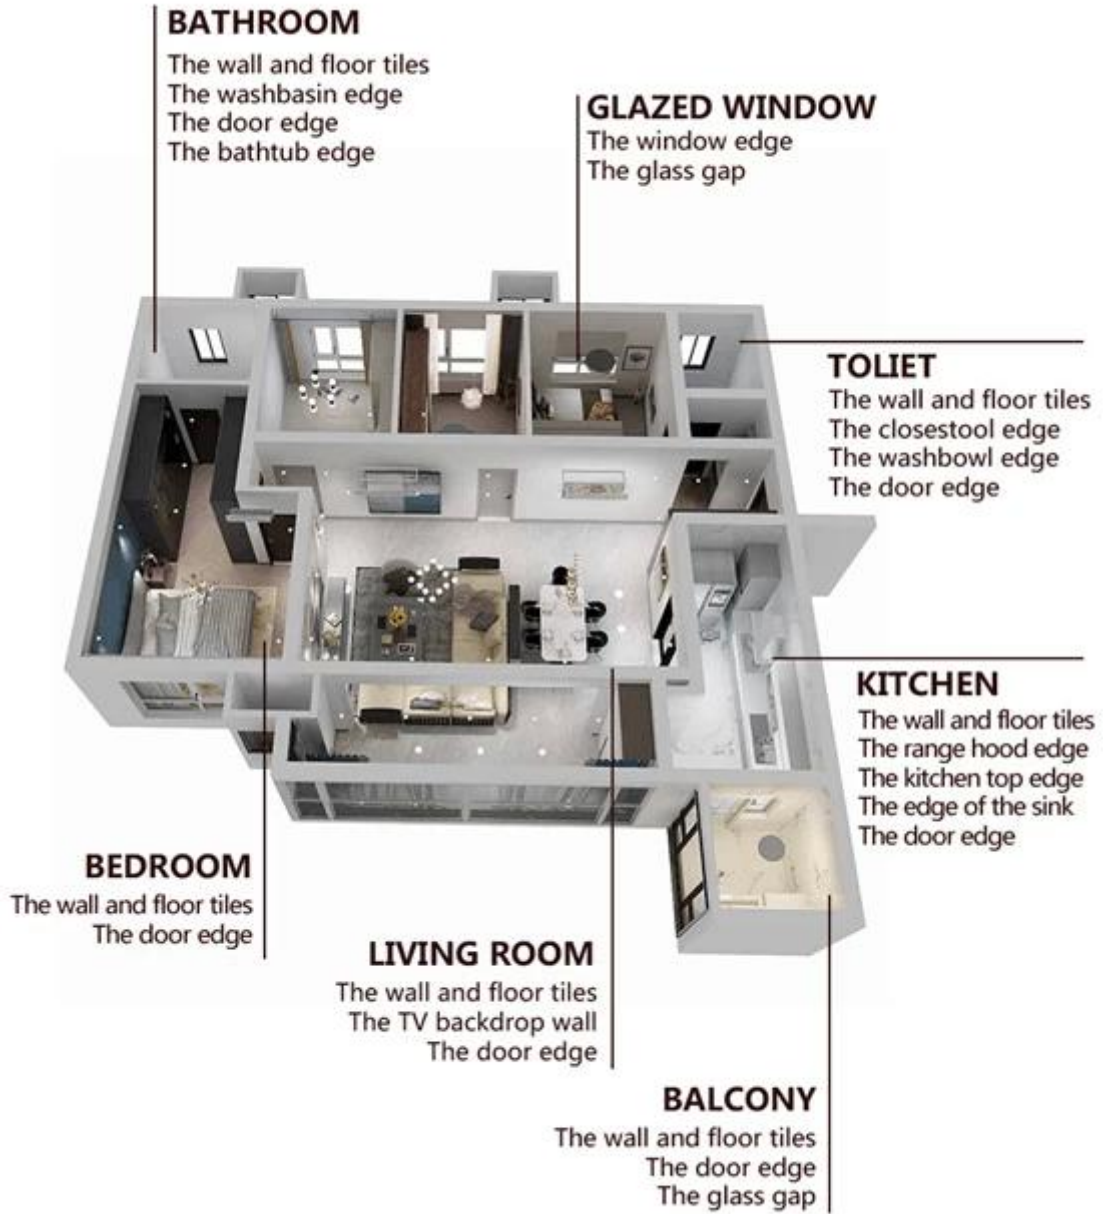

□□□□□□□□□□□□□□□□□□□□ □



01 Clear the joints and keep them dry



02 Mix components A and B without water



03 Completely Grouting the joints with rubber scraper



04 Scrub twice with a scouring pad after 5-10mins



05 Wipe the residual grout with wet towel



06 Step on after Completely dry ≥24hours



01 Cutter Knife



02 Pointing trowel



03 Brush



04 Rainbow Scraper




05 Stirring Knife



06 The sponge



07 Scouring Pad

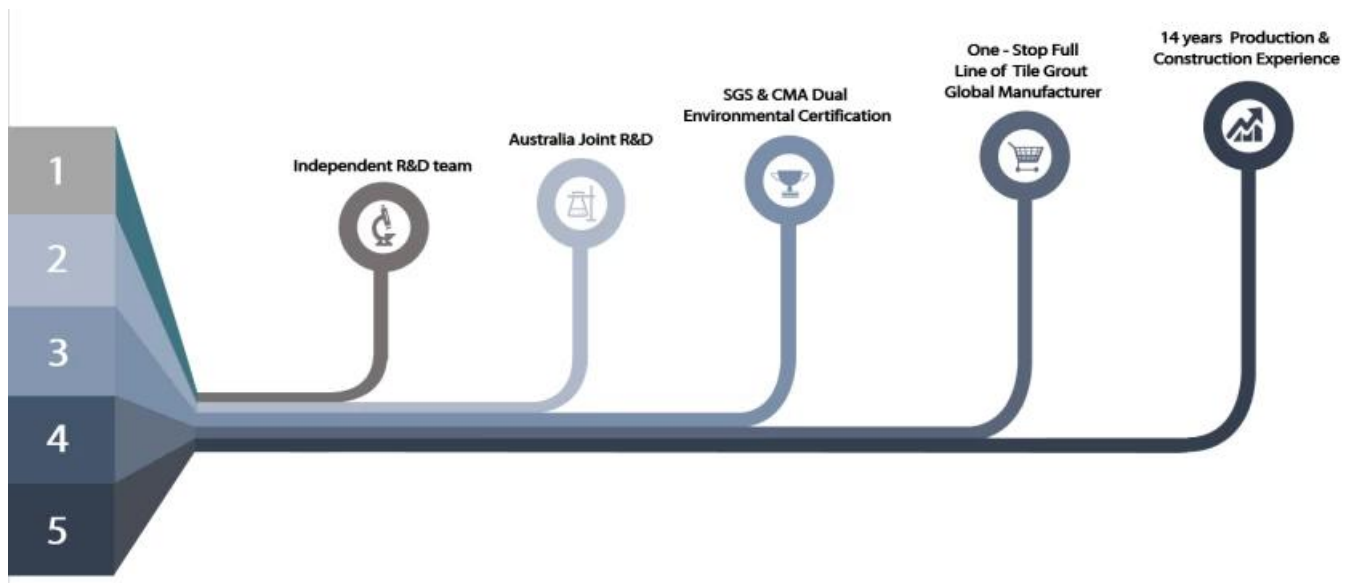





□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□



□□□□□□□□□□

□□□□□□□□□□

